

## GASKELL HALL FIRE EMERGENCY PLAN

**YOU, THE HIRER, ARE THE 'RESPONSIBLE PERSON'**, to be ready to take control during any incident. Your priority is always lives and not the building.

### **BEFORE THE EVENT:**

- Check the appropriate exit routes are clear in the areas hired:  
Main door/foyer, side door, Green Room door, costume & props store
- Check the location of fire safety equipment in the areas hired:  
**6 x Foam fire extinguishers**, **NOT** to be used for liquid or electrical fires,  
located at: Main door in Hall and Side door in Hall  
Green Room door  
Back of stage nearest top kitchen  
Upper kitchen  
Costume and props store  
**4 x CO<sub>2</sub> fire extinguishers**, to be used for liquid and electrical fires, located in:  
Both kitchens  
Back of stage road side  
Top of stairway from foyer  
**1 x Powder fire extinguisher** in boiler room  
**1 x Fire blanket** in kitchen by cooker in upper kitchen
- If bringing any electrical equipment, check it has been PAT tested.
- Inform helpers on evacuation routes, and advise them to take note of any users who may need help with evacuation, and warn everyone that the lift must not be used in the event of a fire. Keep fire doors shut.
- Draw attention to **FIRE ACTION** notices and where to direct people to the fire assembly point (side of Butchers' shop opposite the main entrance/exit doors).
- Do not allow cars to block the route around the back of the hall to leave space for emergency vehicles, or to block the side door to the car park.

### **IN THE EVENT OF A FIRE:**

- Sound the alarm on any of the **Manual Call Points** (MCP) located at all building exit points.
- Take control with loud, clear instructions to evacuate through the nearest exit and assemble at the side of the Butchers' shop opposite the main entrance/exit.
- Dial 999 for the Emergency Services. There is no phone in the hall so have a mobile available.
- Do not use the lift.
- Only if safe, check all rooms have been evacuated.
- Do not take risks.
- Use emergency equipment only if necessary to evacuate the building using instructions given.
- Do not allow anyone to return into the building.
- Contact a member of the Committee. Tel. numbers are on the external noticeboard.

## **Important Fire Alarm information to be read, prior to an event, by hirers and the person designated to take responsibility in the event of a fire.**

### **1. Ensure that you are familiar with the Fire Emergency Plan.**

The Plan can be found on the Gaskell Hall's website:

<https://gaskellhall-silverdale.co.uk/userfiles/downloads/EMERGENCY%20PLAN.pdf>

A paper copy of the Plan is also provided in the file in the entrance foyer of the hall.

### **2. Additional Information**

**In the event of a smoke or heat detector being automatically activated, or a manual call point (MCP) being activated as a result of a fire being detected, the procedure given in the Fire Emergency Plan MUST be followed.** The fire alarm will sound and, in addition, strobe lights will flash in the toilet areas on the main hall level.

The zone in which the smoke, heat detector or MCP has been activated will be displayed on the screen of the control panel which is located in the hall foyer.

**If, and only if,** following an inspection, it is certain that an MCP has been activated in error, or that a smoke detector has been activated by someone, say, smoking on the premises, the alarm may be **silenced and reset** using the control panel as follows:

- i) Provide **clear** instructions to the people in the building that there has been a **false alarm**.
- ii) Insert the black plastic key, located on a hook on the wall opposite the control panel, into the panel (top left) and give it a quarter turn **clockwise**.
- iii) Press the button with a red surround labelled 'SOUND/SILENCE'.
- iv) If an MCP was activated in error, insert the white paddle key, located on a hook on the wall opposite the control panel, into the base of the MCP to reset.
- v) Press the button with a green surround on the control panel labelled 'RESET'.
- vi) Turn the black key in the panel **anti-clockwise** to a vertical position.
- vii) Notify a member of the committee as soon as possible of the false alarm (refer to the contact list on the notice board).

**In the event that the control panel beeps but the fire alarm is not activated,** it is likely that the control panel will state that there is a low battery in the system. The control panel can then be **silenced** as follows:

- i) Insert the black plastic key, located on a hook on the wall opposite the control panel, into the panel (top left) and give it a quarter turn **clockwise**.
- ii) Press the button labelled 'SILENCE BUZZER'.
- iii) Press the button labelled 'RESET'.
- iv) Turn the black key in the panel **anti-clockwise** to a vertical position.
- v) Notify a member of the committee as soon as possible (refer to the contact list on the notice board).

**NOTE: IT IS ESSENTIAL THAT NO OTHER SETTINGS ARE CHANGED ON THE CONTROL PANEL. THIS MAY INCUR A CALLOUT FEE.**